





Description

Pleko Bricklike is a decorative wall finish system that provides the desired look of brick but with many added benefits. It can be easily installed over any **Pleko** Wall Systems or directly to approved substrates such as concrete, stucco, CMU, and ICFs (Insulating Concrete Forms). It results in lighter wall with higher insulation and provides enhanced moisture protection. It also gives more design flexibility using the various colors and textures available; and only requires one supplier even for multi-cladding aesthetics.

The look of brick and benefits of EIFS.


Features

- Lightweight
- Energy Saving
- Unlimited pattern, texture and color options
- Suitable for various substrates
- Ideal for renovation works

Color and texture

Mortar color and brick colors are achieved by using any of 64 standard colors or custom colored finishes. Recommended textures are **Pleko FreeTex**, Sand Finishes (Fine, Medium or Coarse) or Structure Finish depending on the type of brick texture desired.

To achieve in-depth brick look large aggregate finishes are used.

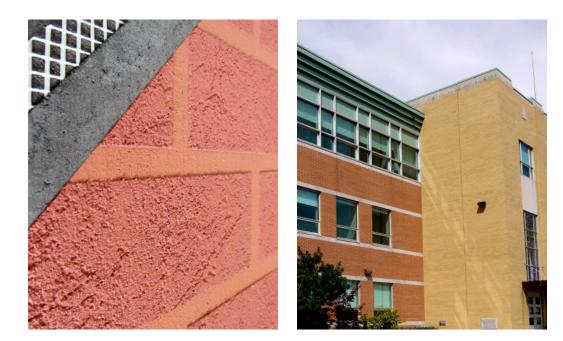



Available Patterns


The stencil templates are readily available in a wide variety of patterns and thicknesses. Custom patterns are available with the proper lead time.

Regular Face Brick

2 1/ 4" x 7 3/4" Brick with 1/2" Mortar

Running Bond

4" x 7 3/4" Brick with 1/2" Mortar

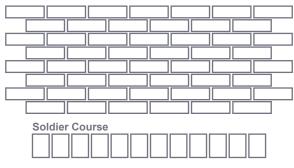

Metric Face Brick


2" x 7 7/8" Brick with 3/8" Mortar

	-




Cinder Block

8 1/ 2" x 15 3/4" Brick with 3/4" Mortar

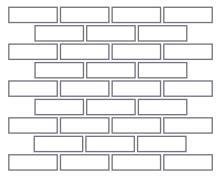

Hudson Brick

3 5/ 8" x 11 1/2" Brick with 1/2" Mortar

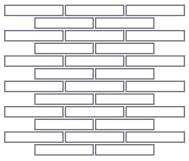

Utality Brick


3 5/ 8" x 11 5/8" Brick with 1/2" Mortar

Mid-Town Stucco

3" x 10 1/2" Brick with 1/2" Mortar


Queens Brick


2 3/4" x 7 7/8" Brick with 3/8" Mortar

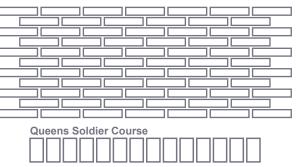

California Face Brick

2 1/ 4" x 7 5/8" Brick with 3/8" Mortar

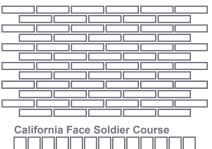

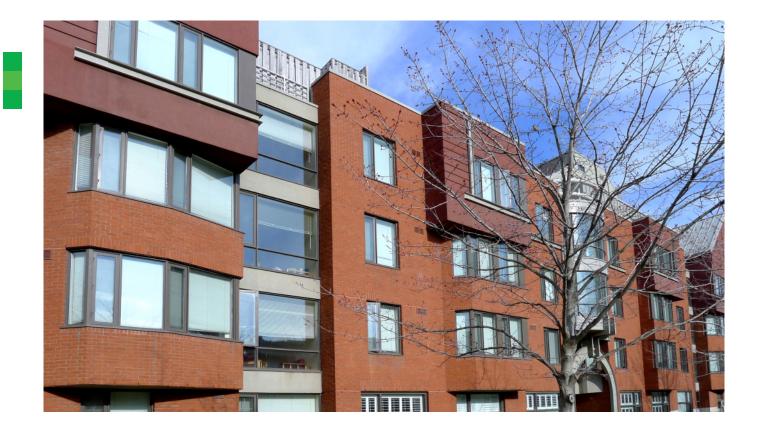

Application

4 easy steps to get the look you want:

First trowel apply a colored layer of **Pleko Sand Fine** to create the "mortar joints". Float the finish and let it dry 24 hours before next step. Alternatively roller- apply **Pleko TopCoat** in the desired color to prime the prepared concrete or EIFS basecoat.

Next adhere the stencil over the dried finish. Make sure to align the template properly with windows, doors and other details just as brick would. Immediately roll over the stencil with a roller to push firmly against the wall. A trowel may also be used but make sure not to tear the stencil. Templates should be applied only to areas that will be completed that day.

Then trowel apply selected finish in the desired color over the template. Use diagonal motion to avoid pushing finish under the stencil. Make sure the stencil cells are completely filled. Float the finish in constant motion.

Finally remove the stencil revealing the desired brick pattern and mortar color. Discard the stencil.







